

Make	Model	Year	Variant	Bodystyle	Type	Engine
Peugeot	406	1995	8B [1995-2004]	Saloon	Saloon	1.6 1580ccm 88HP 65KW (Petrol)
Peugeot	406	1995	8B [1995-2004]	Saloon	Saloon	1.8 16V 1761ccm 110HP 81KW (Petrol)
Peugeot	406	1995	8B [1995-2004]	Saloon	Saloon	2.0 16V 1998ccm 132HP 97KW (Petrol)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	1.6 1580ccm 88HP 65KW (Petrol)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	1.8 16V 1761ccm 110HP 81KW (Petrol)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	1.9 D 1905ccm 75HP 55KW (Diesel)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	1.9 TD 1905ccm 90HP 66KW (Diesel)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	1.9 TD 1905ccm 92HP 68KW (Diesel)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	2.0 16V 1998ccm 132HP 97KW (Petrol)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	2.0 Turbo 1998ccm 147HP 108KW (Petrol)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V 2088ccm 109HP 80KW (Diesel)
Peugeot	406	1996	8B [1995-2004]	Saloon	Saloon	3.0 24V 2946ccm 190HP 140KW (Petrol)
Peugeot	406	1996	8E/F [1996-2004]	Estate	Estate	1.8 16V 1761ccm 110HP 81KW (Petrol)
Peugeot	406	1996	8E/F [1996-2004]	Estate	Estate	1.9 D 1905ccm 75HP 55KW (Diesel)
Peugeot	406	1996	8E/F [1996-2004]	Estate	Estate	1.9 TD 1905ccm 90HP 66KW (Diesel)
Peugeot	406	1996	8E/F [1996-2004]	Estate	Estate	2.0 16V 1998ccm 132HP 97KW (Petrol)
Peugeot	406	1996	8E/F [1996-2004]	Estate	Estate	2.0 Turbo 1998ccm 147HP 108KW (Petrol)
Peugeot	406	1996	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V 2088ccm 109HP 80KW (Diesel)
Peugeot	406	1996	8E/F [1996-2004]	Estate	Estate	3.0 24V 2946ccm 190HP 140KW (Petrol)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	1.6 1580ccm 88HP 65KW (Petrol)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	1.8 1761ccm 90HP 66KW (Petrol)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	1.8 16V 1761ccm 110HP 81KW (Petrol)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	1.9 D 1905ccm 75HP 55KW (Diesel)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	1.9 TD 1905ccm 90HP 66KW (Diesel)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	1.9 TD 1905ccm 92HP 68KW (Diesel)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	2.0 16V 1998ccm 132HP 97KW (Petrol)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	2.0 Turbo 1998ccm 147HP 108KW (Petrol)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V 2088ccm 109HP 80KW (Diesel)
Peugeot	406	1997	8B [1995-2004]	Saloon	Saloon	3.0 24V 2946ccm 190HP 140KW (Petrol)
Peugeot	406	1997	8C [1997-2004]	Coupe	Coupe	2.0 16V 1998ccm 132HP 97KW (Petrol)
Peugeot	406	1997	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V 2946ccm 190HP 140KW (Petrol)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	1.8 1761ccm 90HP 66KW (Petrol)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	1.8 16V 1761ccm 110HP 81KW (Petrol)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	1.9 D 1905ccm 75HP 55KW (Diesel)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	1.9 TD 1905ccm 90HP 66KW (Diesel)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	2.0 16V 1998ccm 132HP 97KW (Petrol)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	2.0 Turbo 1998ccm 147HP 108KW (Petrol)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V 2088ccm 109HP 80KW (Diesel)
Peugeot	406	1997	8E/F [1996-2004]	Estate	Estate	3.0 24V 2946ccm 190HP 140KW (Petrol)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	1.6 1580ccm 88HP 65KW (Petrol)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	1.8 1761ccm 90HP 66KW (Petrol)

Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	1.8 16V	1761ccm 110HP 81KW (Petrol)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 92HP 68KW (Diesel)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	1998	8B [1995-2004]	Saloon	Saloon	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	1998	8C [1997-2004]	Coupe	Coupe	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	1998	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	1.8 16V	1761ccm 110HP 81KW (Petrol)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	1998	8E/F [1996-2004]	Estate	Estate	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	1.6	1580ccm 88HP 65KW (Petrol)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	1.8 16V	1761ccm 110HP 81KW (Petrol)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 92HP 68KW (Diesel)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	2.0 16V	1997ccm 135HP 99KW (Petrol)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	1999	8B [1995-2004]	Saloon	Saloon	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	1999	8C [1997-2004]	Coupe	Coupe	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	1999	8C [1997-2004]	Coupe	Coupe	2.0 16V	1997ccm 135HP 99KW (Petrol)
Peugeot	406	1999	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	1.8 16V	1761ccm 110HP 81KW (Petrol)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	2.0 16V	1997ccm 135HP 99KW (Petrol)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)

Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	1999	8E/F [1996-2004]	Estate	Estate	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	1.6	1580ccm 88HP 65KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	1.8 16V	1761ccm 110HP 81KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 92HP 68KW (Diesel)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.0 16V	1997ccm 135HP 99KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2000	8B [1995-2004]	Saloon	Saloon	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2000	8C [1997-2004]	Coupe	Coupe	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2000	8C [1997-2004]	Coupe	Coupe	2.0 16V	1997ccm 135HP 99KW (Petrol)
Peugeot	406	2000	8C [1997-2004]	Coupe	Coupe	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2000	8C [1997-2004]	Coupe	Coupe	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2000	8C [1997-2004]	Coupe	Coupe	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2000	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	1.8 16V	1761ccm 110HP 81KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.0 16V	1997ccm 135HP 99KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	2.2 HDI	2179ccm 133HP 98KW (Diesel)

Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2000	8E/F [1996-2004]	Estate	Estate	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	1.6	1580ccm 88HP 65KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 92HP 68KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2001	8B [1995-2004]	Saloon	Saloon	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2001	8C [1997-2004]	Coupe	Coupe	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2001	8C [1997-2004]	Coupe	Coupe	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2001	8C [1997-2004]	Coupe	Coupe	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2001	8C [1997-2004]	Coupe	Coupe	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2001	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2001	8E/F [1996-2004]	Estate	Estate	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	1.6	1580ccm 88HP 65KW (Petrol)

Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 92HP 68KW (Diesel)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2002	8B [1995-2004]	Saloon	Saloon	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2002	8C [1997-2004]	Coupe	Coupe	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2002	8C [1997-2004]	Coupe	Coupe	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2002	8C [1997-2004]	Coupe	Coupe	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2002	8C [1997-2004]	Coupe	Coupe	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2002	8C [1997-2004]	Coupe	Coupe	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2002	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2002	8E/F [1996-2004]	Estate	Estate	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	1.6	1580ccm 88HP 65KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	1.9 D	1905ccm 75HP 55KW (Diesel)

Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 92HP 68KW (Diesel)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2003	8B [1995-2004]	Saloon	Saloon	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2003	8C [1997-2004]	Coupe	Coupe	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2003	8C [1997-2004]	Coupe	Coupe	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2003	8C [1997-2004]	Coupe	Coupe	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2003	8C [1997-2004]	Coupe	Coupe	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2003	8C [1997-2004]	Coupe	Coupe	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2003	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2003	8E/F [1996-2004]	Estate	Estate	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	1.6	1580ccm 88HP 65KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	1.9 TD	1905ccm 92HP 68KW (Diesel)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.0 16V	1998ccm 132HP 97KW (Petrol)

Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2004	8B [1995-2004]	Saloon	Saloon	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2004	8C [1997-2004]	Coupe	Coupe	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2004	8C [1997-2004]	Coupe	Coupe	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2004	8C [1997-2004]	Coupe	Coupe	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2004	8C [1997-2004]	Coupe	Coupe	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2004	8C [1997-2004]	Coupe	Coupe	3.0 V6	2946ccm 207HP 152KW (Petrol)
Peugeot	406	2004	8C [1997-2004]	Coupe	Coupe	3.0 V6 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	1.8	1761ccm 90HP 66KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	1.8 16V	1749ccm 116HP 85KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	1.9 D	1905ccm 75HP 55KW (Diesel)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	1.9 TD	1905ccm 90HP 66KW (Diesel)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.0 16V	1998ccm 132HP 97KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.0 16V	1997ccm 136HP 100KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.0 16V HPi	1997ccm 140HP 103KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 109HP 80KW (Diesel)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.0 HDI 110	1997ccm 107HP 79KW (Diesel)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.0 HDI 90	1997ccm 90HP 66KW (Diesel)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.0 Turbo	1998ccm 147HP 108KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.1 TD 12V	2088ccm 109HP 80KW (Diesel)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.2	2230ccm 158HP 116KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	2.2 HDI	2179ccm 133HP 98KW (Diesel)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	3.0 24V	2946ccm 190HP 140KW (Petrol)
Peugeot	406	2004	8E/F [1996-2004]	Estate	Estate	3.0 V6	2946ccm 207HP 152KW (Petrol)